


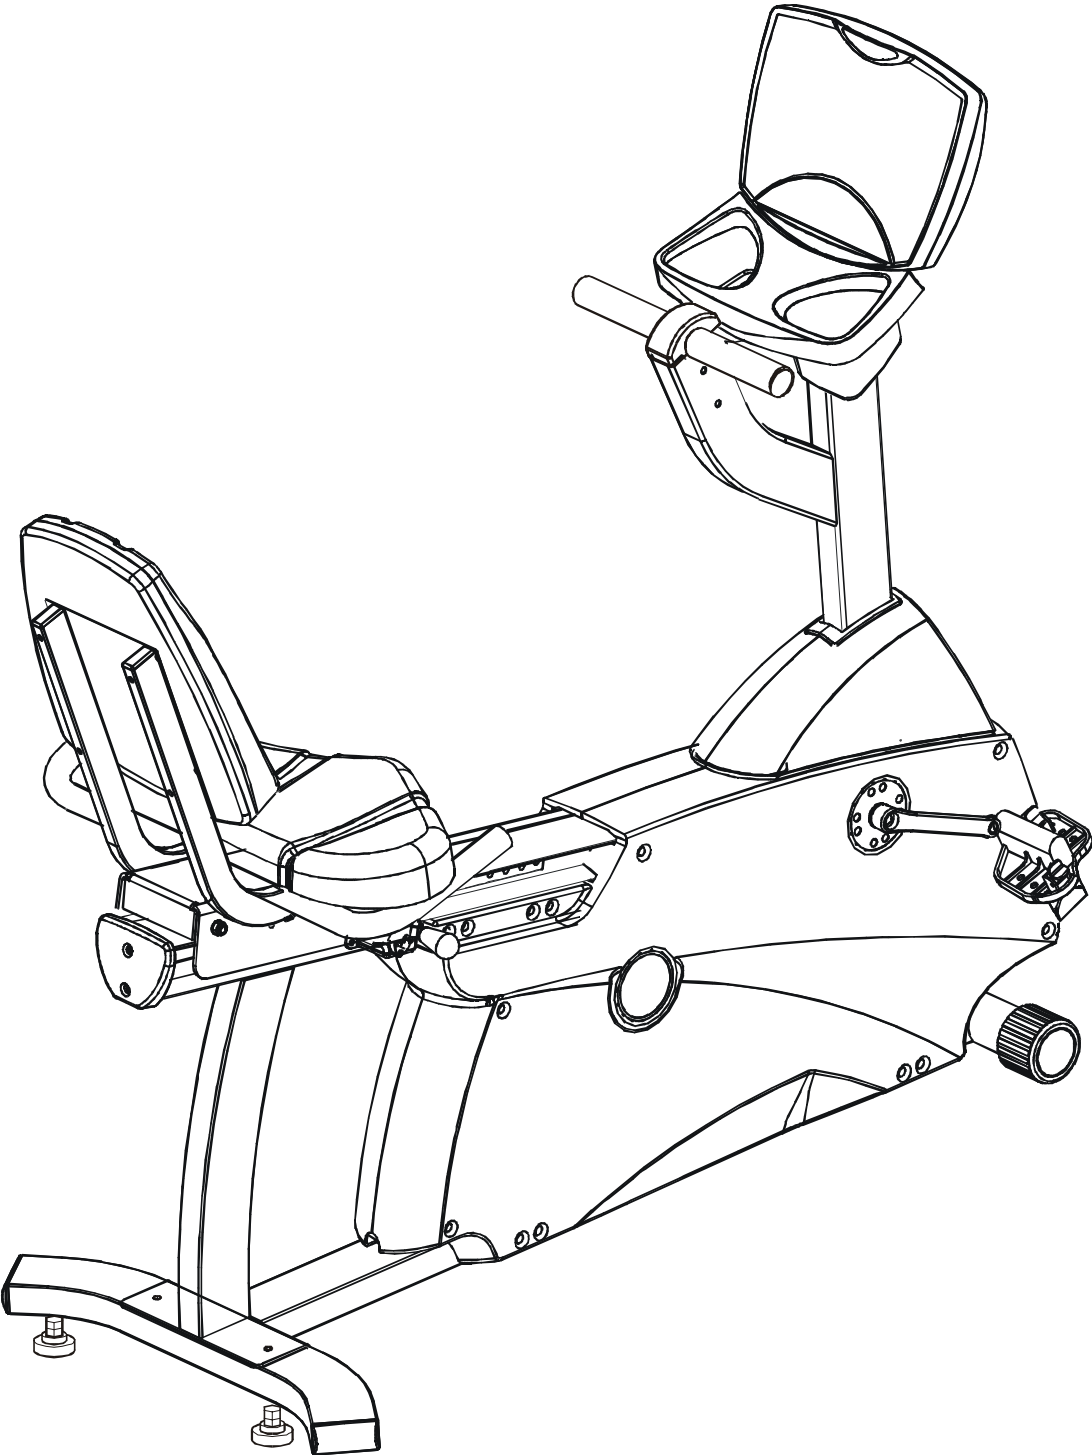

Example of a starting Serial # RT8060210000001			
RT8	06	0210	000001
Model #	Plant #	Year/month	Serial Number
Operation Manual REX2288			
Service Manual M051-00K25-A059			

